


**STANDARD METHOD OF TEST FOR PREPARING AND DETERMINING THE DENSITY OF THE HOT MIX ASPHALT (HMA) SPECIMENS BY MEANS OF THE SUPERPAVE GYRATORY COMPACTOR  
FOP FOR AASHTO T 312**

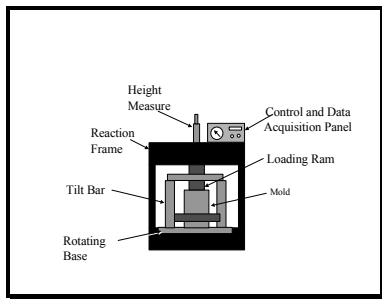

02

**Scope**

The Superpave gyratory compactor is used to compact cylindrical specimens of hot-mix asphalt (HMA) by means of gyrations under a specified compressive stress and angle of inclination.

03

**Significance**

The procedure covers preparing specimens for determining the mechanical and volumetric properties of HMA. This procedure may also be used for field control of an HMA production process.

04

**Gyratory Components**

05

Refer to AASHTO T 312

- Reaction Frame
  - Rotating base
  - Motor
- Loading System
  - Ram
  - Pressure gauge
- Height measure and recordation
- Molds, etc.

06

**Standardization**

Calibration should be periodically verified on:

- Ram pressure
- Angle of gyration
- Gyration frequency
- Specimen height recording device
- Mold and plates

Angle of gyration may refer to either external angle or internal angle. The external angle is the tilt of the mold in respect to a plane external to the mold. The internal angle is the tilt of the mold with respect to the end plate surface within the mold. External and internal angles are not considered equivalent. The calibration and verification should be performed appropriate to the measurement desired. External angle should

be verified using manufacturer's recommendations. Internal angle is verified in accordance with AASHTO PP 48.

07

### **Equipment Preparation**

Equipment preparation should be performed in accordance with manufacturer's recommendations, these should include:

- Warm-up equipment
- Verify settings
  - Angle
  - Pressure
  - Number of gyrations
- Lubricate bearing surfaces
- Prepare recording device
- Pre-heat molds and plates at compaction temperature (minimum of 30 min.)
- Pre-heat chute, spatulas and other apparatus (not to exceed compaction temperature, but may be lower to prevent damaging equipment)

08

### **Sample Preparation**

#### **Laboratory Prepared HMA**

If laboratory mixed, prepare in accordance with AASHTO R 30. If the specimens are to be used for the determination of volumetric properties, the sample size should be adjusted to result in a compacted specimen that is  $115 \pm 5\text{mm}$  at the desired number of gyrations. It may be necessary to produce a trial specimen to determine the approximate testing size.

#### **Plant produced HMA**

Sample should be obtained in accordance with T 168 and reduced to testing size in accordance with TM 5. The sample shall be brought to the compaction temperature range by careful, uniform heating in an oven immediately prior to molding.



09

10

11

## Compaction Procedure

Superpave gyratory compactors may be different from that shown. Follow the manufacturers recommended loading procedure. This may require the steps performed in an order other than that discussed, i.e. the mold is placed in a Pine / Brovold compactor prior to material loaded into the mold.

1. Remove pre-heated mold and plate(s) from the oven.
2. Place base plate and paper disc in bottom of mold.

**Note: Ensure plate(s) are correctly placed in the mold.**


3. Mix sample with a heated spatula until it appears homogenous.
4. Pour the mix into the mold all at once (care should be taken to avoid segregation or loss of material).



12

13

5. Level the mix in the mold.
6. Place a paper disc and the heated top-plate (if required) on top of leveled sample.

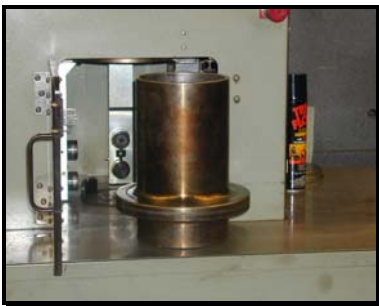

14

7. Load the mold into the compactor.
8. Ensure compactor is set to the specified number of gyrations or required specimen height.
9. Apply pressure: 600 kPa  $\pm$  18 kPa
10. Set angle: 1.25  $\pm$  0.02° external angle, 1.16  $\pm$  0.02° average internal angle.
11. Apply the specified number of gyrations.



15

Once the compaction is complete (after the specified number of gyrations), the compacted specimen is extruded from the mold and the paper discs removed. The compressed sample is then cooled down to room temperature, and the specimen is appropriately identified.

**Note: A cooling period of 5-10 min. in front of a fan may be necessary for some HMA before extruding to insure the specimens are not damaged.**

When reusing the mold it should be re-heated for a minimum of 5 minutes.

16

### Density Procedure

Determine maximum specific gravity ( $G_{mm}$ ) of the loose mix in accordance with AASHTO T 209 using a companion sample. Laboratory samples shall be prepared and conditioned in accordance with the FOP for R 30. If mix is plant produced conditioning is not required.

Determine the bulk specific gravity ( $G_{mb}$ ) of the compacted specimen in accordance with AASHTO T 166/T 275.

To calculate density, obtain the recorded specimen height to the nearest 0.1 mm after each revolution. This may be a printout or via computer data acquisition software.

### Density Calculations

The measured heights are used to calculate the density of the sample during the compaction process. These densities are referred to as the “uncorrected density” because they are estimated based on exact volume calculations. The formulas given calculate the volume in  $\text{cm}^3$  to allow a direct comparison with the specific gravity.

The uncorrected relative density may be calculated at any point in the compaction process using the equations at the left.

where:

$\%G_{mmux}$  = uncorrected relative density

$W_m$  = mass of the specimen in g

$G_{mm}$  = theoretical maximum specific gravity

$G_m$  = unit wt. of water ( $1\text{g}/\text{cm}^3$ )

$$\%G_{mmux} = \frac{W_m}{V_{mx} G_{mm} G_m} \times 100$$

and

$$V_{mx} = \frac{\pi d^2 h_x}{4000}$$

17

$$\%G_{\text{mmx}} = \frac{G_{\text{mb}} h_{\text{m}}}{G_{\text{mm}} h_{\text{x}}} \times 100$$

18

$x$  = number of gyrations  
 $V_{\text{mx}}$  = specimen volume, in  $\text{cm}^3$  at any point based on diameter and height at that point (using mm for height and diameter)

$h_{\text{x}}$  = height after  $x$  gyrations (mm)

$d$  = diameter (mm)

**Note: This formula gives the volume in  $\text{cm}^3$  to allow a direct comparison with the specific gravity.**

### Corrected Relative Density

The corrected relative density ( $\%G_{\text{mmx}}$ ) may be determined for any point in the compaction of the specimens by using the formula at the left

where:

$\%G_{\text{mmx}}$  = corrected relative density as percent of maximum theoretical specific gravity

$G_{\text{mb}}$  = measured bulk specific gravity of the compacted specimen

$h_{\text{m}}$  = height of extruded specimen (mm)

$G_{\text{mm}}$  = theoretical maximum specific gravity

$h_{\text{x}}$  = height after  $x$  gyrations (mm)

### Calculation Example

#### Corrected Relative Density

The relative density at for  $N_{\text{des}}$  for the specimen in Figure 1

$$\%G_{\text{mmx}}@N_{\text{des}} = \frac{(2.409)(116.2)}{(2.461)(118.0)} \times 100 = 96.4\% \quad 20$$

Where:

$N_{\text{des}}$  = 100 gyrations

$G_{\text{mb}}$  = 2.409

$G_{\text{mm}}$  = 2.461

$\%G_{\text{mmx}}$  = corrected relative density

$h_{\text{x}}$  = height after  $x$  gyrations (mm)

$h_{\text{m}}$  = height of extruded specimen (mm)

$N_{\text{ini}}$  = 8

$N_{\text{des}}$  = 100

$N_{\text{max}}$  = 160

**Example Gyrotory Printout (Figure 1)**

Specimen Size: 0 mm

Date: 11/01/04

Pressure: 600 kPa

Time: 2:35:27

Specimen ID: 1

Test #1

Technician:

SPECIMEN HEIGHT (MM) vs. GYRATION NO.

	0	1	2	3	4	5	6	7	8	9
0	150.9	146.0	142.4	139.9	137.9	136.4	135.1	114.0	133.1	132.4
10	131.7	131.0	130.4	129.9	129.3	128.9	128.5	128.1	127.7	127.4
20	127.0	126.6	126.4	126.1	125.8	125.5	125.3	125.1	124.9	124.7
30	124.4	124.3	124.0	123.9	123.7	123.5	123.4	123.2	123.0	122.9
40	122.7	122.6	122.4	122.3	122.1	122.1	122.0	121.8	121.7	121.6
50	121.5	121.3	121.3	121.2	121.0	121.0	120.9	120.8	120.7	120.6
60	120.5	120.4	120.4	120.3	120.2	120.1	120.0	119.9	119.9	119.8
70	119.7	119.6	119.6	119.6	119.5	119.4	119.3	119.3	119.2	119.1
80	119.1	119.0	119.0	118.9	118.9	118.8	118.7	118.7	118.6	118.5
90	118.5	118.4	118.4	118.4	118.3	118.2	118.2	118.1	118.1	118.1
100	118.0	118.0	118.0	118.0	117.9	117.9	117.8	117.7	117.7	117.7
110	117.7	117.6	117.6	117.5	117.5	117.4	117.4	117.3	117.3	117.3
120	117.3	117.2	117.2	117.2	117.2	117.1	117.1	117.0	117.0	117.0
130	117.0	116.9	116.9	116.8	116.8	116.8	116.8	116.8	116.7	116.7
140	116.6	116.6	116.6	116.6	116.6	116.6	116.5	116.5	116.4	116.4
150	116.4	116.4	116.4	116.3	116.3	116.3	116.3	116.2	116.2	116.2
160	116.2	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
170	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
180	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
190	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
200	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
210	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
220	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
230	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
240	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
250	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
260	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
270	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
280	0.0									

21

**Report**

Report on standard agency forms. If applicable to the agency requirements, include the following information:

22

1. Project name
2. Test date
3. Sample or lot and subplot number
4. Test location represented
5. Specimen I.D.
6. Job mix formula I.D.
7. Percent binder to nearest 0.1%
8. Specimen mass to nearest 0.1g
9.  $G_{mm}$  to nearest 0.001
10.  $G_{mb}$  to nearest 0.001
11. Mold diameter to nearest 1.0mm
12. Height at each gyration to nearest 0.1mm
13. Relative density expressed as percent of  $G_{mm}$  to nearest 0.1%
14. Gyration angle to the nearest  $0.01^\circ$  and method used to determine or verify angle.

23

**Tips!**

- Don't forget to install base plate and paper disc in bottom of mold prior to filling.
- Don't forget to level the material in the mold.
- Cooling of extruded hot specimens is required in many cases to prevent damage due to handling.
- Don't forget to remove the paper discs as soon as possible from the hot specimens.





**REVIEW QUESTIONS**

1. What is the purpose of the Gyratory Compactor?
2. How many kPa's of pressure is applied to the specimen?
3. What angle is the specimen compacted?
4. Using the example information calculate the corrected relative density ( $\%G_{mmx}$ ) at  $N_{ini}$ .

